FACE MASK BLACK SILICONE

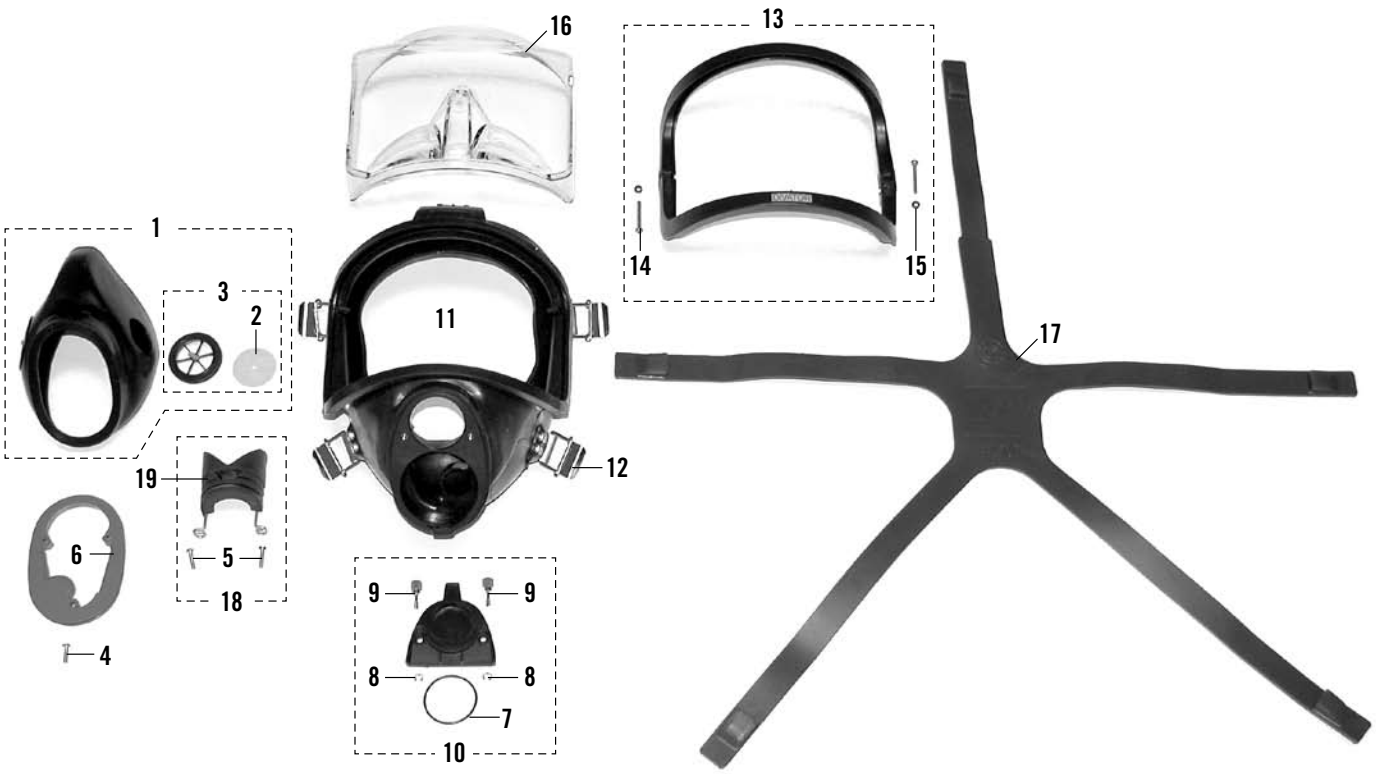

#	SPARE PART	ORDER #	NOTES
•	Divator Mask, black silicone	336 101 161	
1	Inner mask assy. black silicone	460 190 542	Incl. #2-3
2	Non-return valve disc	336 190 264	10-pack
3	Valve seat assy. black	460 190 549	2 pack. Incl. #2
4	Screw	336 190 246	10-pack
5	Screw	336 190 489	10-pack
6	Retaining plate	460 190 398	
7	O-ring	336 190 222	5-pack
8	Circlip	336 190 255	10-pack
9	Screw	460 190 300	10-pack
10	Cover assembly, black	460 190 555	Incl. #7-9
11	Mask body assy. black silicone	460 190 544	Incl. #12
12	Buckle assy.	460 190 541	5-pack
13	Visor frame kit MK II, black	460 190 547	Incl. #14-15
14	Screw	336 190 409	10-pack

#	SPARE PART	ORDER #	NOTES
15	Spacer	336 190 554	10-pack
16	Visor MK II	336 190 850	
17	Head harness, black NR/CR	460 190 520	
18	Pressure equalizer	336 190 373	Incl. #5&19
19	Pressure equalizing pad	460 190 513	

BREATHING VALVE WITHOUT SAFETY PRESSURE BLACK

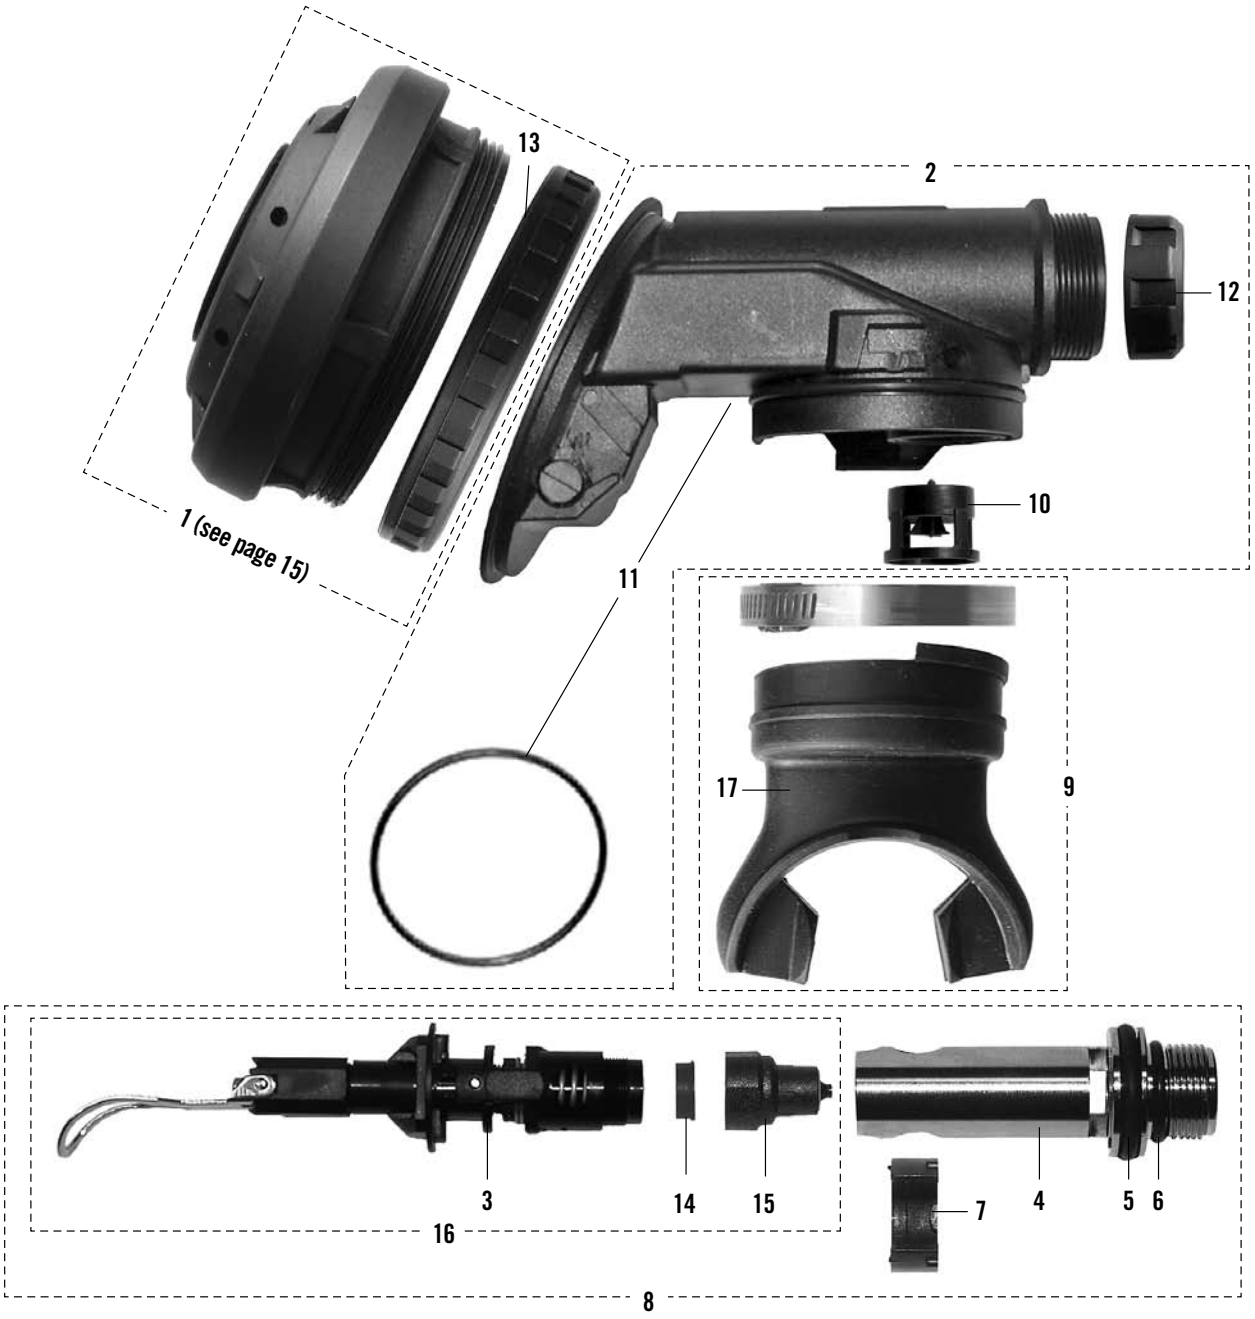

#	SPARE PART	ORDER #	NOTES
•	Breathing valve (w/o SP)	336 101 150	for face mask
•	Breathing valve (w/o SP)	97 199-01	with mouth piece
1	Diaphragm attachment	336 101 155	Incl. #13
2	Valve housing MK II, black w/o SP	336 101 156	Incl. #10-12
3	Counter pressure assy. w/o SP	460 190 588	
4	Connection nipple	460 190 396	Incl. #5, 6
5	O-ring	336 190 227	10-pack
6	O-ring	336 190 228	10-pack
7	Retaining ring	346 190 198	10-pack
8	Valve insert assy. w/o SP	336 190 407	Incl. #3-7, 14-15
9	Mouthpiece assy.	336 190 353	Incl. #17
10	Non-return valve assy.	460 190 559	
11	O-ring, only used with face mask	336 190 226	10-pack

#	SPARE PART	ORDER #	NOTES
12	Nut, black	460 190 516	5-pack
13	Locking ring, black	460 190 515	5-pack
14	Balancing diaphragm	460 190 409	5-pack
15	Valve cone assy.	336 190 064	
16	Valve insert sub assy. w/o SP	97 083-51	Incl. #3, 14-15
17	Mouth piece	460 190 505	

DIAPHRAGM ATTACHMENT, W/O SP, BLACK

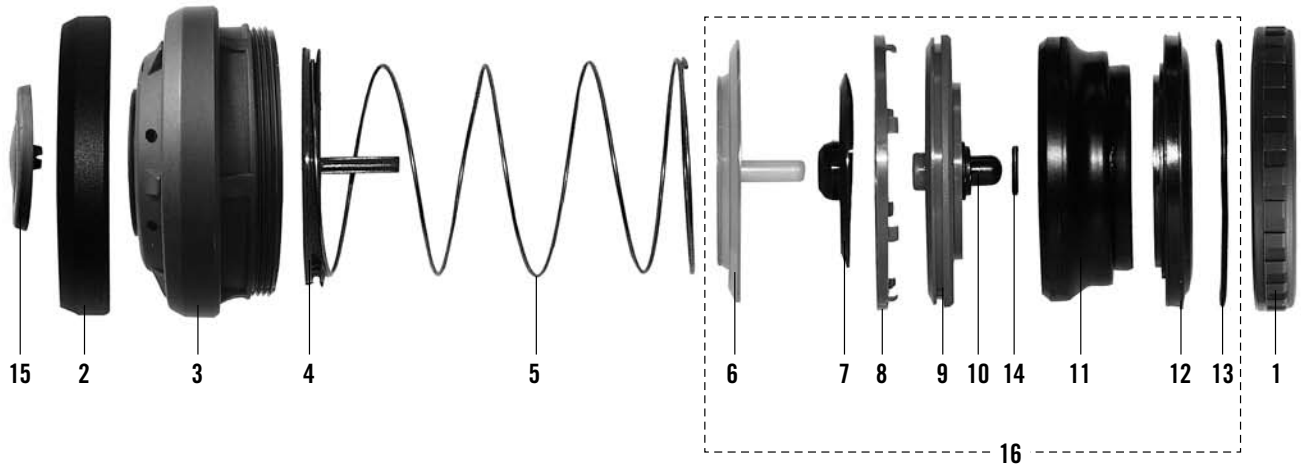

#	SPARE PART	ORDER #	NOTES
1	Locking ring, black	460 190 515	5-pack
2	Shield ring	460 190 410	5-pack
3	Cover with purge button, black	460 190 518	
4	Guide disc	460 190 412	
5	Sealing spring	460 190 500	5-pack
6	Sealing disc	460 190 393	5-pack
7	Exhalation diaphragm	346 190 196	5-pack
8	Securing ring	460 190 413	10-pack
9	Diaphragm ring	460 190 394	
10	Guide pin	346 190 194	10-pack
11	Diaphragm	460 190 140	
12	Diaphragm holder	460 190 395	
13	O-ring	336 190 224	5-pack
14	Washer	336 190 638	10-pack
15	Purge button	336 190 487	5-pack
16	Diaphragm assembly	336 190 360	Incl. #6-14

BREATHING VALVE WITH SAFETY PRESSURE BLACK

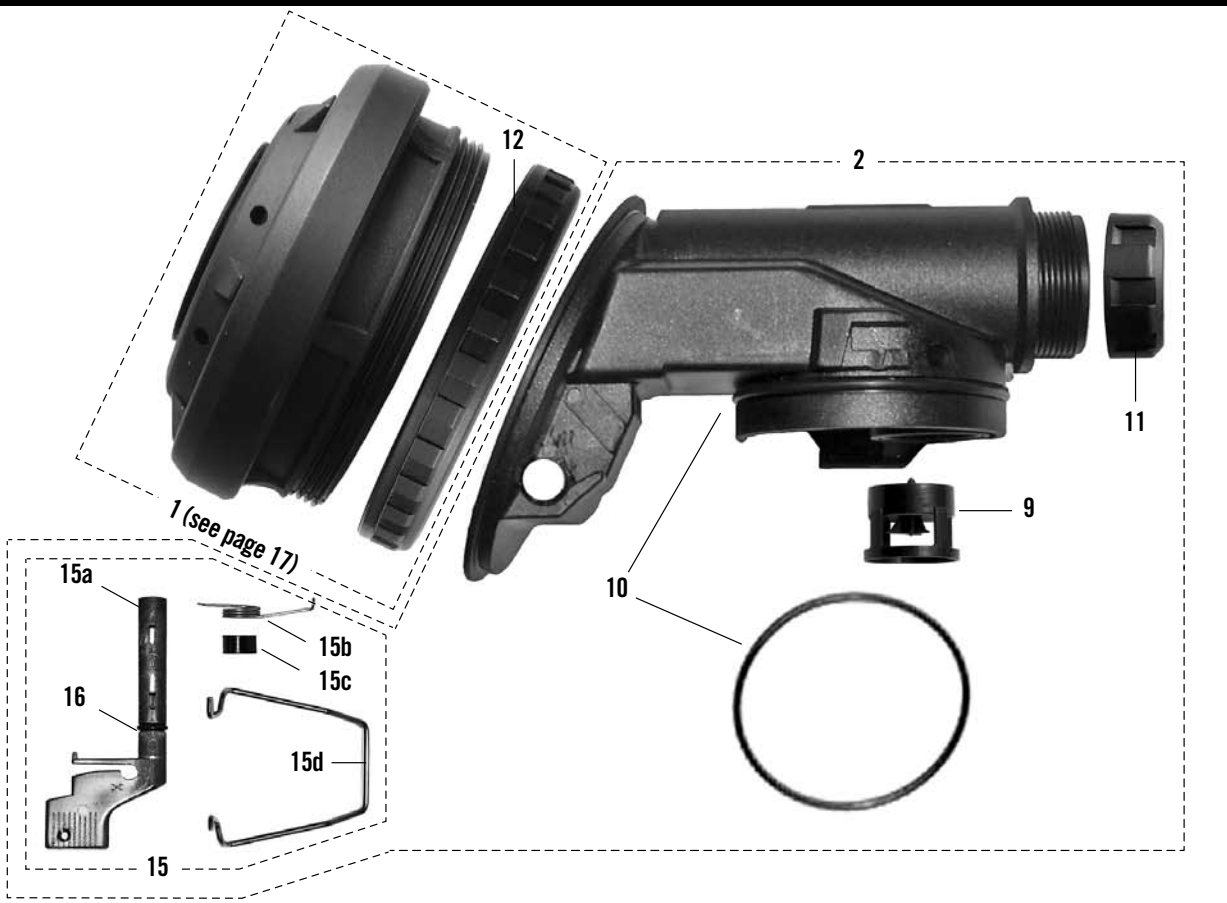

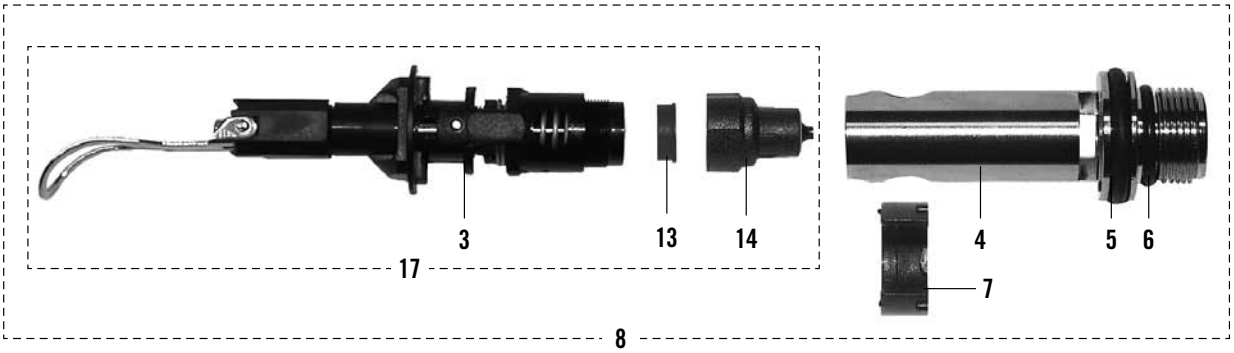

#	SPARE PART	ORDER #	NOTES
•	Breathing valve (w. SP)	336 101 149	
1	Diaphragm attachment	460 190 552	Incl. #12
2	Valve housing MK II, black w. SP	336 101 158	Incl. #9-11, 15-16
3	Counter pressure assy. w. SP	460 190 589	
4	Connection nipple	460 190 396	Incl. #5, 6
5	O-ring	336 190 227	10-pack
6	O-ring	336 190 228	10-pack
7	Retaining ring	346 190 198	10-pack
8	Valve insert assy. w. SP	336 190 357	Incl. #3-7, 13-14
9	Non-return valve assy.	460 190 559	
10	O-ring, only together with face mask	336 190 226	10-pack

#	SPARE PART	ORDER #	NOTES
11	Nut, black	460 190 516	5-pack
12	Locking ring, black	460 190 515	5-pack
13	Balancing diaphragm	460 190 409	5-pack
14	Valve cone assy.	336 190 064	
15	Lever assy.	336 190 142	Incl. #16
16	O-ring	336 190 225	10-pack
17	Valve insert sub assy. w. SP	97 028-51	Incl. #3, 14-15

DIAPHRAGM ATTACHMENT, W. SP, BLACK

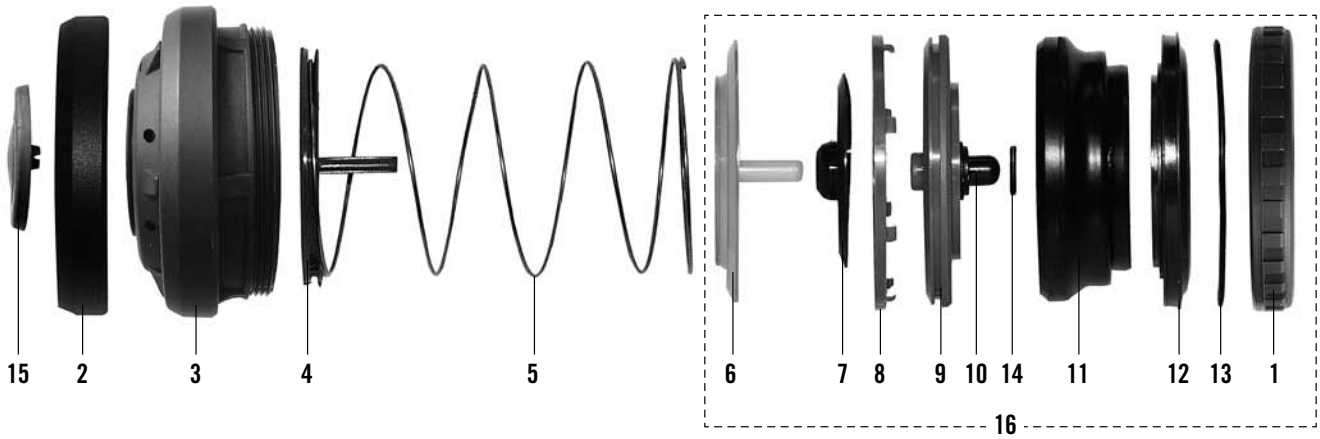

#	SPARE PART	ORDER #	NOTES
1	Locking ring, black	460 190 515	5-pack
2	Shield ring	460 190 410	5-pack
3	Cover with purge button, black	460 190 518	
4	Guide disc	460 190 412	
5	Sealing spring	460 190 508	5-pack
6	Sealing disc	460 190 393	5-pack
7	Exhalation diaphragm	346 190 196	5-pack
8	Securing ring	460 190 413	10-pack
9	Diaphragm ring	460 190 394	
10	Guide pin	346 190 194	10-pack
11	Diaphragm	460 190 140	
12	Diaphragm holder	460 190 395	
13	O-ring	336 190 224	5-pack
14	Washer	336 190 638	10-pack
15	Purge button	336 190 487	5-pack
16	Diaphragm assembly	336 190 360	Incl. #6-14